
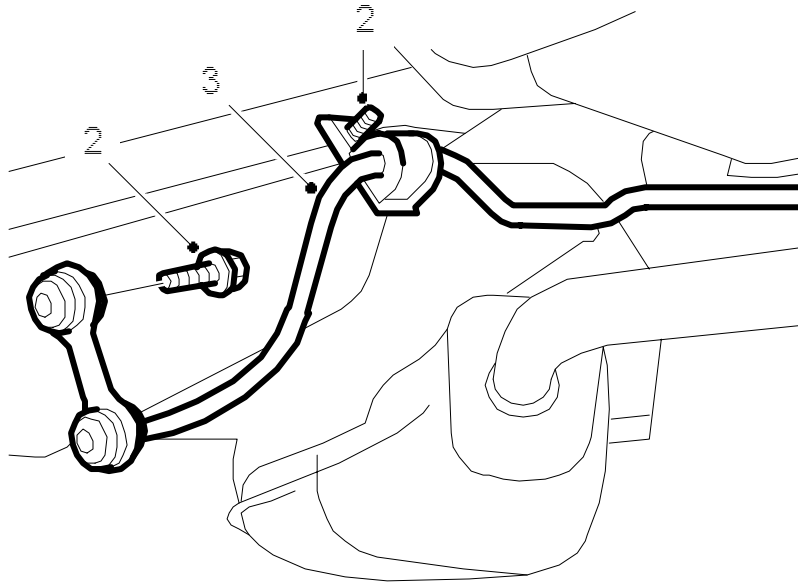


Anti-roll bar**To remove**

E 732R053

1. Raise the car and remove the rear wheels.
2. Remove the anti-roll bar retaining nuts and bolts.
3. Remove the anti-roll bar.

To fit

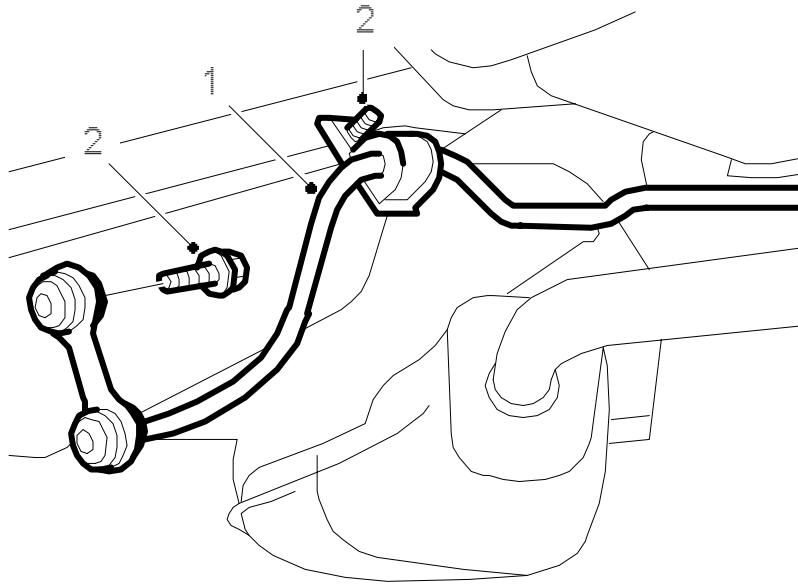

E 732R054

1. If necessary, lubricate the anti-roll bar bushes with Molycote 33 (bushes on new anti-roll bars are already lubricated), position the anti-roll bar and fit all the bolts and nuts.

2. Tighten the nuts and bolts.

Tightening torque 50 Nm (40 lbf ft)

3. Fit the wheels, see [Wheels](#).

Tightening torque 110 Nm (81 lbf ft)

4. Lower the car to the floor.