
Filter element

To remove

1. Raise the car.

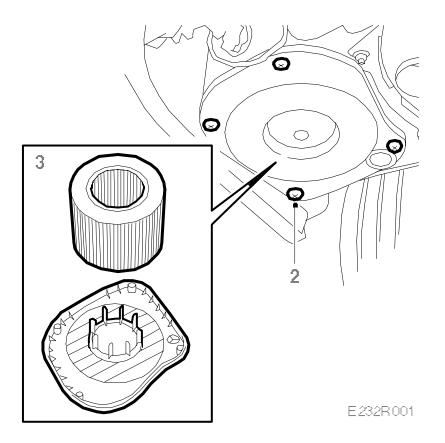

- 2. Remove the air cleaner cover.
- 3. Lower away the cover and remove the filter element.

To fit

- 1. Clean the air cleaner filter housing.
- 2. Fit a new air filter element. Place the filter element in the cover and bolt the cover to the casing.
- 3. Lower the car to the floor.