

**SAAB****MONTERINGSANVISNING · INSTALLATION INSTRUCTIONS
MONTAGEANLEITUNG · INSTALLATIONS DE MONTAGE**

Saab 9-3

Adaptarnät, mobiltelefonanslutning

Adapter harness, mobile telephone connection

Adapternetz, Mobiltelefonanschluß


Câblage de raccordement téléphone

Cavi di adattamento per il collegamento del telefono cellulare



Red de adaptador, conexión de teléfono móvil

携帯電話接続用アダプターハーネス

Accessories Part No.	Group	Date	Instruction Part No.	Replaces
400 129 078	9:39-04	Jun 00	53 70 473	

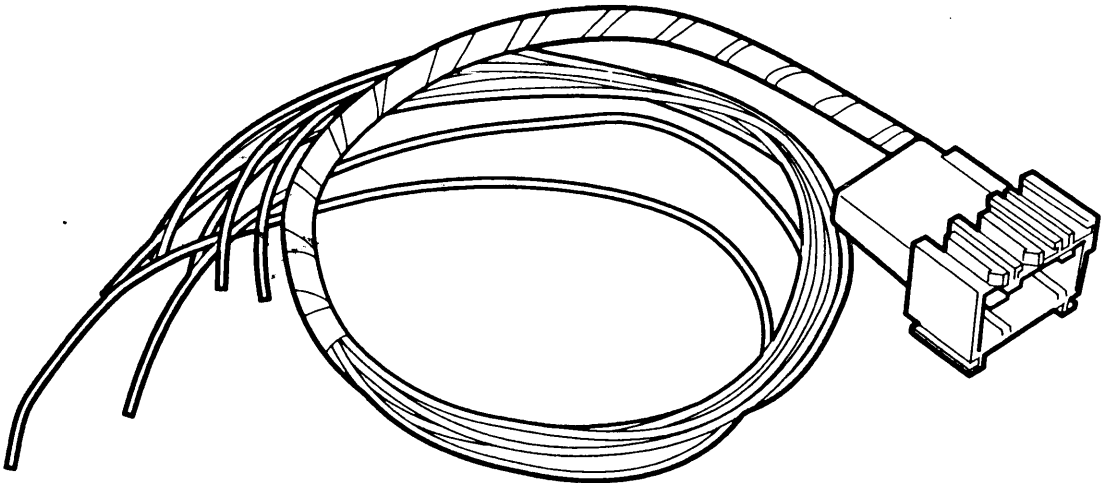

D930A166

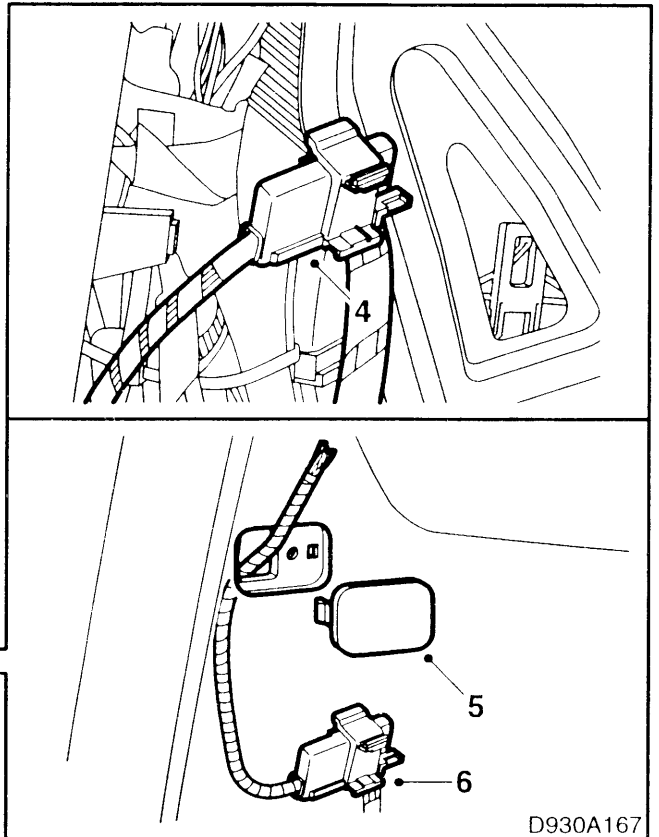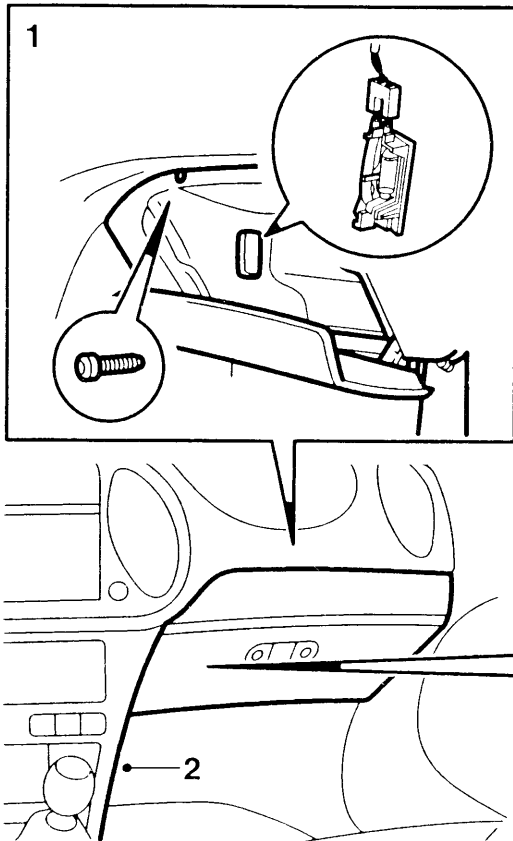

D930A167

English

Saab 9-3 is prepared for installation of mobile telephone in two levels:

Telephone prepared (Tel 0) and Handsfree prepared (Tel 1). Adapter harness will function in both cases.

Note

(Applies only to Handsfree prepared model, Tel 1.) Before starting to work, check with the telephone manufacturer if the telephone uses high or low level for microphone output.

- 1 Remove the glove box.
- 2 Remove the side panel (on the passenger side).
- 3 Cut off the cable tie securing the 10-pin connector on the pre-wired telephone installation.
- 4 Connect the adapter harness to the 10-pin connector.
- 5 Remove the cover from the side panel and insert the adapter harness.
- 6 Fasten the connector with cable ties in the existing hole in the side panel so that it will not rattle.

